

**IMPORTANT!!!! IMPORTANT!!!!**  
**Please read before you install the Vista Control panel**

This document contains critical information that will assist you when installing the Vista control panel

. Please read each item carefully BEFORE installation.

- When applying power to the control, you should plug the transformer in first, and then connect the battery. *The panel will not power up initially on battery power only.*
- The programming and operating keypads are the 6160 series (6160, 6160V and the 6160RF.) Every keypad has to have its own address (a number from 00 to 30). All new keypads come with an address of 31. The only exception to this is the 6160**RF** keypad. It comes with an address of 16.

The first keypad on the system must be set to address 16. Additional keypads must be set to address 17-23 and must be enabled additionally in programming (fields \*190 -- \*196).

- Setting the Keypad Address: The procedures for setting the keypad address can be found on the back of the keypad box.

ALL CURRENT VISTA CONTROL PANELS require addressable keypads such as the 6160 and the 6150. The keypad's default address is 31 – this address **MUST BE CHANGED**. If the address is not changed, no information will be displayed on the screen. The procedures to change the address can be found on the back of the installation sheet for the 6160 and 6150. This document can also be found at Note 146 below.